



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Drive Cap	
1a	13647	Drive Cap (Pink)	1
1b	13653	Drive Cap (Metallic Silver)	1
2		Upper Housing	
2a	13644	Upper Housing (Pink)	1
2b	13651	Upper Housing (Metallic Silver)	1
3		Lower Housing	
3a	13646	Lower Housing (Pink)	1
3b	13652	Lower Housing (Metallic Silver)	1
4	60802	Switch Button	
5	13618	Motor Assembly	1
6	S20651	Blade Drive Assembly	1
7	15766	Blade Drive Screw	2
8	63897	Hinge Assembly	1
9	64537	Blade Lock	1
10	64535	Lock Keeper	1
11	27864	Blade Hinge Screw	2
12	60801	Circuit Board	1
13	65828	Screw	2
14	60701	Insulator	1
15	60067	Cord Set	1
16	25542	Hanger Bail	1
17	64606	Front Housing Screw	2
18	60804	Rear Housing Screws	2
19	60803	Oil Seal	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
20	17091	Foam Pad	1
21	64033	Blade Bracket	1
22	64013	Tension Spring	1
23	64027	Blade Guide	1
24	27863	Blade Screw	2

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.